



BYD Battery-Box Premium LV BMU Instruction Manual

V1.2

VALIDITY


This document is valid for the BYD Battery-Box Premium LV BMU (Battery Management Unit) (“BMU”) from firmware version 1.0.

INTENDED USE


BMU is applicable for the BYD Battery-Box Premium LV system(s) (LVS 4.0, LVS 8.0, LVS 12.0, LVS 16.0, LVS 20.0, LVS 20.0 and LVL 15.4) (“Battery-Box”), and works as a control unit for the system(s).

PRODUCT DESCRIPTION

BMU is equipped with WLAN. The APP Be Connect 2.0 could communicate with BMU through the WLAN.

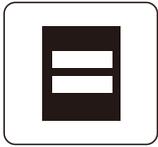


Be Connect 2.0

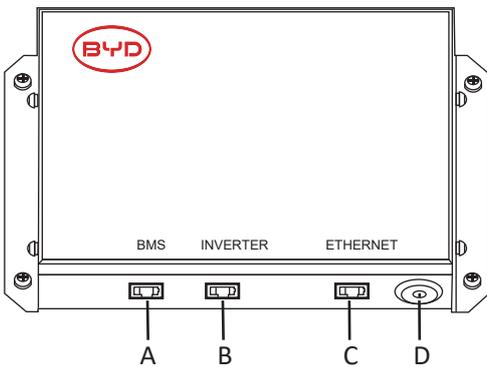

- A:** RJ45 port for connection with Battery-Box
- B:** RJ45 port for connection with an inverter
- C:** Ethernet port
- D:** LED Button

The WLAN name and password are on the label of BMU.

Assignment of Port B

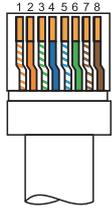

No.	Assignment
1	Unused
2	Unused
3	Unused
4	CAN H
5	CAN L
6	Unused
7	Unused
8	Unused

SCOPE OF DELIVERY


- 1×BMU
- 1×Instruction Manual

TECHNICAL DATA

Communication	Ethernet/CAN
Input voltage*	40-60 V
Input current	200 mA
Weight	3 kg
Dimensions (L×W×H)	250 mm×122 mm×50 mm
Ambient temperature in operation	-10°C to 50°C
Relative humidity (non-condensing)	5% to 85%
Degree of protection (in accordance with IEC 60529)	IP20

*BMU is powered by Battery-Box through the network cable. No other power supply is needed.

CONNECTION DIAGRAM

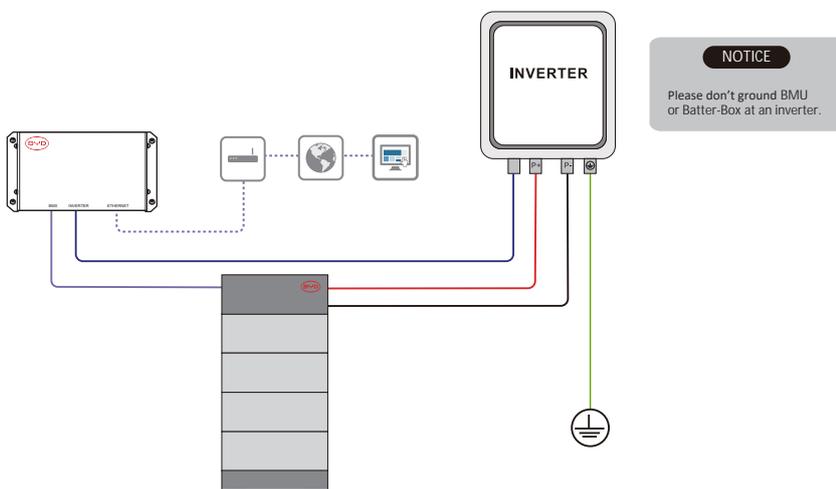




1. Detailed connection instructions with inverters could be read in the Battery-Box Quick Start Guide.
2. The communication cable between BMU and an inverter cannot be longer than 10 meters. And the cable should be CAT 5 shield or above.
3. Please make sure the correct pins are connected between BMU and an inverter.
4. The connection between BMU and Battery-Box should be the Straight-Through Wired Cable.
5. Connected to the Internet is highly recommended.
6. The WLAN of BMU will switch off in 5 hours from turning on.
Press the LED Button once when BMU is on could activate the WLAN again.
Press the LED Button three times in six seconds, each time around 1 second could reset the WLAN.

MOUNTING

Install BMU on the wall or a rack. The recommended expansion screw size is M4×12. The minimum distance from the ground is 50 mm.

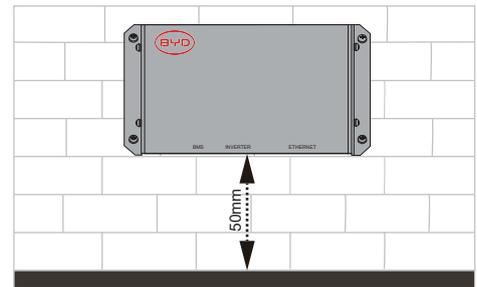

COMMISSIONING

1. Make sure an inverter, Battery-Box, and BMU are correctly connected.
2. Press the LED Button on Battery-Box for 3 seconds.
3. Refer to Battery-Box Operating Manual for further steps.

Updating FIRMWARE

The firmware of BMU could only be updated when it operates with Battery-Box. Please refer to Battery-Box Operating Manual for further information.

LED STATUS

Blinking white and blue alternately	White <input type="radio"/> ON <input type="radio"/> OFF Blue <input checked="" type="radio"/> ON <input type="radio"/> OFF		The battery system is initiating.
Solid white	White <input type="radio"/> ON <input type="radio"/> OFF Blue <input checked="" type="radio"/> ON <input type="radio"/> OFF		Idle (the battery system is neither charging nor discharging).
Blinking white slowly	White <input type="radio"/> ON <input type="radio"/> OFF Blue <input checked="" type="radio"/> ON <input type="radio"/> OFF		The battery system is charging.
Blinking white quickly	White <input type="radio"/> ON <input type="radio"/> OFF Blue <input checked="" type="radio"/> ON <input type="radio"/> OFF		The battery system is discharging.
Blinking white and solid blue	White <input type="radio"/> ON <input type="radio"/> OFF Blue <input checked="" type="radio"/> ON <input type="radio"/> OFF		The battery system is discharging, and the SOC is below 15%.
Blinking white and blue	White <input type="radio"/> ON <input type="radio"/> OFF Blue <input checked="" type="radio"/> ON <input type="radio"/> OFF		An error has occurred (refer to the Service Guideline and Checklist for further details)

**When an error happens, refer to the Operation Manual of the corresponding Battery-Box for the more details.



DISPOSAL

Following the applicable regulations for electronic waste to dispose of BMU.

CONTACT

BYD Global Service	
Email	bboxservice@byd.com
Telephone	+86 755 89888888-47175
Address	No.3009, BYD Road, Pingshan, Shenzhen, 5118118, P. R. China
Website	www.bydbatterybox.com
Social Media Link	https://www.facebook.com/BatteryBoxBYD https://twitter.com/BYD_BatteryBox https://www.linkedin.com/company/byd-batthey-box

Europe	EFT-Systems GmbH
Email	service@eft-systems.de
Telephone	+49 9352 8523999 +44 (0) 2037695998 (UK) +34 91 060 22 67 (ES) +39 02 87368364 (1T)
Address	Bruchtannenstr. 28, 63801 Kleinostheim, Germany
Website	www.eft-systems.de

Australia	Alps Power Pty Ltd
Email	service@alpspower.com.au
Telephone	+61 2 8005 6688
Address	2/62 Belmore Road, Riverwood, NSW 2210
Website	www.alpspower.com.au

South Africa	Afriplus Energy Group (Pty) Ltd
Email	support@afriplusenergy.co.za
Telephone	+27 21 140 3594
Address	The Pavilion, Corner Of Dock & Portswood Road, V&A Waterfront, 8001, Cape Town
Website	www.afriplusenergy.co.za

USA	BYD US Service
Email	us.homeenergy@byd.com
Telephone	626-491-2333
Address	888 E Walnut St, Pasadena, CA 91101 United States

Copyright © Shenzhen BYD Electronics Co., Ltd. All right is reserved.